CARBON INFRARED HEATER CH2500 TW

User's Manual



- Thank you for purchasing Veito Carbon Infrared Heater. Please read the instructions thoroughly before using your heater.

- After reading the instructions, please keep it in a place accessible to all users.
 Ensure you read 'Safety Precautions' in advence and use the product corectly.
 We can not be liable for any damages caused by failure to observe these instructions.
 The product is specified for use with a power supply of 230V 50/60Hz

- This manual includes the product warrantly.
 Specifications and contents of this manual may be changed without prior notice, in accordance with our commitment to product quality, design and control.

CONTENTS

■ Safety Precautions	7
How to install How to use power	
Configuration and name	8
Main body How to use	8
Operation and stop How to diagnose safety device	8 9
■ Cleaning and maintenance ■ Storage Instructions	9
■ Troubleshooting	10
■ Wiring diagram Specification	10
Product warranty	11



Safety Precautions

These precautions are designed for keeping users safe and preventing material damage. Be sure to read them and use the product correctly.

• There are 3 classifications of safety precautions and they are listed in the box below.



Possiblity of death or severe injury in the event of mishandling.



Possiblity of death or severe injury in the event of mishandling.



Possiblity of injury and/or material damage in the event of mishandling.

*Meaning of picture signs






Indicate contents that people must carry out




*After reading this, be sure to keep it at a place where other users can refer to it at any time.

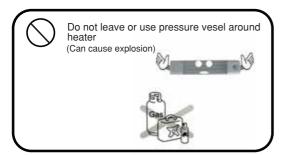




MARNING *After reading this, be sure to keep it at a place where other users can refer to it at any time.

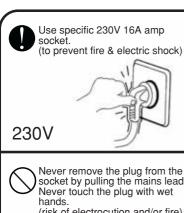

Ensure both plug and socket is clean and free from dust when



 
Never use with a damaged power lead, plug or loose wall socket. (this can cause electric shock, short circuiting or fire)



socket by pulling the mains lead (risk of electrocution and/or fire)



 Do not extend the power cord. (risk of breakdown or fire)




Ensure you hold the power plug properly when either plugging in or unplugging.



Do not kink or place the main power lead under heavy objects. (risk of electric shock or fire)



 Do not overload the dedicated power socket with other . equipment.



Always turn off the unit by use of its control cnob and never by just pulling the mains plug or tripping the circuit breaker.





Ensure that the unit is properly earthed through the mains power circuit.

 




Do not install, use or place any combustiblé liquids or gases nearthe product. (risk of fire or explosion)

Never place the unit near combustible products such as curtains, carpets etc. This can cause a fire.





objects into the main body of the product. Never touch it immediately after use. (risk of fire burns or electric shock)



Never place combustible objects on


the product such as vinyl and plastic items.(can cause a risk of fire)






The heater must not be located immediately below a socket outlet when in use. (risk of fire)

*After reading this, be sure to keep it at a place where other users can refer to it at any time.

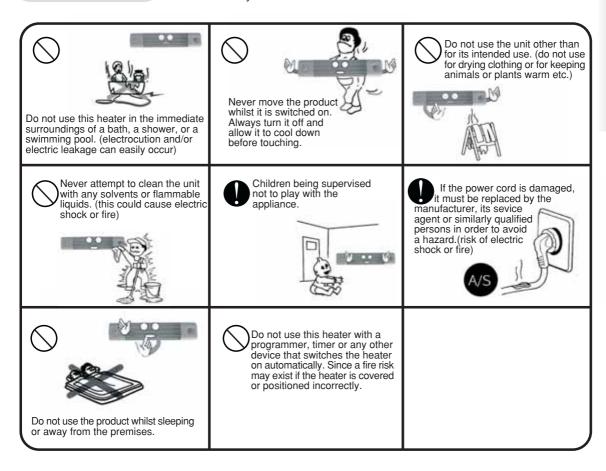




*After reading this, be sure to keep it at a place where other users can refer to it at any time.

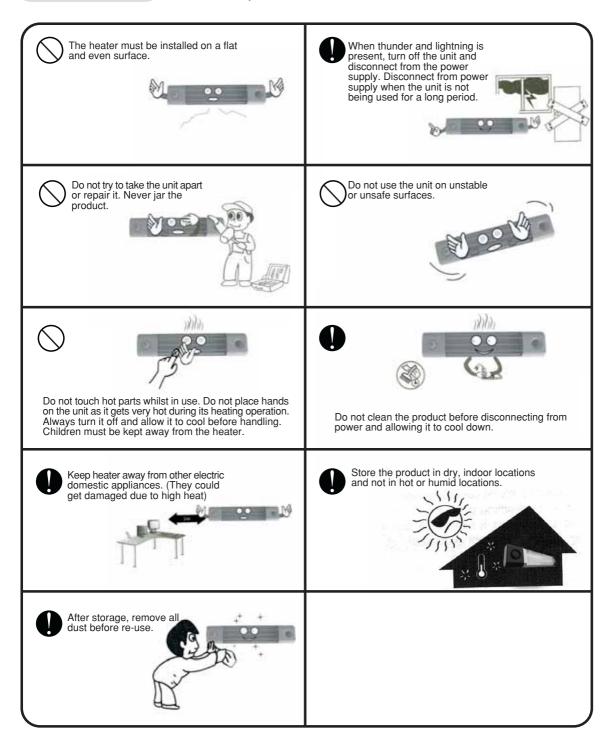

Precautions for installation and before use

PRECAUTIONS FOR INSTAL

*After reading this, be sure to keep it at a place where other users can refer to it at any time.

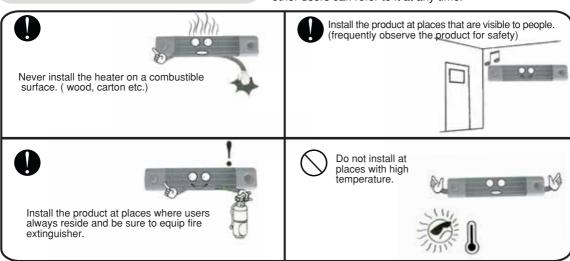


HOW TO INSTALL


*Keep packaking parts because they are necessary in maintaining the heater for a long time.

- The heater can be used as both horizontal and vertical. When the heater is plugged in, it will automatically set its position.
- Check there are no hidden cable before drilling holes for wall plugs.
- Decide the position for the heater on the wall. Proceed as follows;

 
•Install the two L connection parts to the back side of the heater with the screws supplied by keeping a suitable distance between them.



 
•Install the other two L connection parts to the wall with the screws and wall plugs supplied by keeping the same distance between them.



 
Place and secure the heater to the wall with the L connection parts by using the special screws supplied.



 Decide the best position for the heater and fully tighten the screws



 •Always leave a clear space of at least 0.5m from the left and right of the unit. The unit must also have at least 1.8m clear space above it. Never put any obstacles nearer than 1.8m to the front of the heater. The unit must be installed at least 1.8m height from the floor.



 Use the unit in places with easy eccess to power sockets and that are well ventilated.


 Never use connecting terminals in the power lead. Always directly connect the unit to the power.



- When using 230V •Put plug into specific outlet for 230V with earth terminal.



Configuration and Name

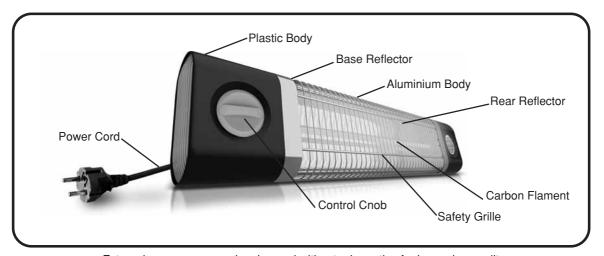

•External appearence can be changed without prior notice for improving quality.

How to use


The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

- 1. Start operation by using control knob.
- 2. Heater is turned on and operation is started.
- 3. Use control knob to stop.



How to Diagnose Safety Device

Veito heater is equippped with diverse safety device, preventing a risk of fire. In the event that heater is not working properly, safety device is operated and heater is automatically stopped.

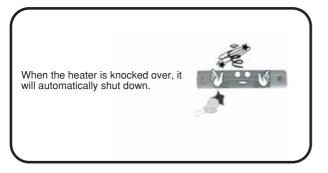


Cleaning and Maintenance


Precautions for examination and handling;

- Handle heater when it is completely cooled down and power is cut off.
- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at any time, there are no customer serviceable parts inside. Do not use powerful abrasive or solvent cleaning fluids when cleaning the heater as they may damage the plastic parts. Use only a clean, dry cloth to clean the external surfaces of the heater only.

 Storage and Instructions

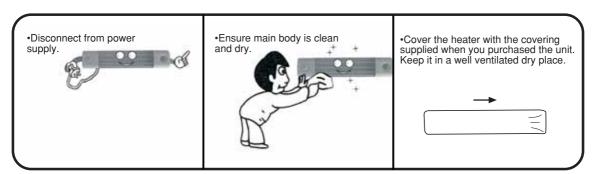





This heater was manufactured conscientiously and checked several times before delivery.


If you experience a malfunction, please try to rectify the fault yourself first with the help of this table. In doing do, you will avoid the unnecessary expense of customer service assistance.

If a foult in your heater can not be rectified with the aid of this table, please contact the Central Customer Service

Repairs must only be carried out by authorized professionals.

	Syptoms	How to deal with
Unit is not working	Is electric supply working?Check that the power plug is plugged in.Is the circuit breaker off?	Check the main power supply is working. Turn on the product once again after plugging in. Reset circuit breaker.

Wiring Diagram

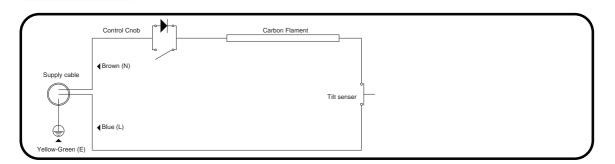

Specification

classification	CH2500 TW
Heating Capacity BTU/h	12000
Maximum Power (W)	2500
Space for use (m²)	30
Power supply	AC 230V 50/60Hz
Size(mm) (WxLxH)	80x170x940
Product weight (kg)	2.5
Controlling method	Level Control
Controlling function	2 Levels

Дистрибьютор Veito: «Мир Нагрева»

www.MirNagreva.ru

veito